


 





 
 
 
 
 
 


Original	Replacement
 Power	 Power
 [i]/Info	 Info
 Mute	 Mute
 I-II	 Dual
 OK/Select	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-/+10	 Shift + Guide
 Exit	 Exit

Original	Replacement
 Menu	 Menu
 Red/1/Return	 Red
 Green/↓/Subtitle	 Green
 Yellow/Audio	 Yellow
 Blue/Angle	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<





 


 









 


 



 


 
 



 
 


 
 



 

 

 



 

 

 



 

 







 




Original	Replacement	Original	Replacement
	>>		>>
	[TV]		TV/R
	D-Menu		Smart
	TV		Media
	AV		AV
	P<P		Pre Ch
	PP		D. Menu
	[≡]		Text
	[≡o]		Subt
	[≡+]		Format
	[≡x]		3D
	[≡◆]/Wide		Shift + Format
	[≡?]		Options
	[≡i]/Guide		Guide
	[::]/Subtitle		Back





Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		D-Menu		Smart
	4		4		<<		<<
	5		5		>>		>>
	6		6		l<<		l<<
	7		7		>>l		>>l
	8		8		Time		Shift + AV
	9		9		Zoom		Shift + Eject
	0		0		Program		Sleep
	-/--/+10		Guide		Search Mode		AV
	Exit		Exit		Repeat		Text
	Red/↑/Return		Red		A-B		Shift + Play
	Green/↓/Subtitle		Green		C		Yellow
	Yellow/Audio		Shift + Yellow		Title		Info
	Blue/Angle		Blue		Display		Shift + Info





Original	Replacement	Original	Replacement
Open/Close	Eject		
Menu	Menu		
Select	Ok		
Up	Up		
Down	Down		
Left	Left		
Right	Right		
Vol+	Vol +		
Vol-	Vol -		
Mute	Mute		

