






 


 
 



 









 



 

 

 

 


 
 



 



 

 





 




 
 

 




 
 
 


Original	Replacement	Original	Replacement
 Standby	 Power	 0	 0
 Source	 AV	 [...]	 Subt
 Prog+	 Ch +	 [=]/Text	 Text
 Prog-	 Ch -	 OK	 Ok
 Vol+	 Vol +	 Up	 Up
 Vol-	 Vol -	 Down	 Down
 Mute	 Mute	 Right	 Right
 Audio	 Dual	 Left	 Left
 1	 1	 Return/Back	 Back
 2	 2	 Options	 Options
 3	 3	 ♥/FAV	 Pre Ch
 4	 4	 Guide	 Guide
 5	 5	 [i+]/[?]	 Info
 6	 6	 Home	 Smart
 7	 7	 Red	 Red
 8	 8	 Green	 Green
 9	 9	 Yellow	 Yellow





Original		Replacement		Original	Replacement
	Blue		Blue		
	Exit		Exit		
	Internet/Video		Media		
	Digital/Analog		TV/R		
	3D		3D		
	[+]		Format		
	Scene		Shift + Pre Ch		
	?/i-Manual		List		
	Sync Menu		Menu		
	Play		Play		
	Theatre		Sleep		
	Stop		Stop		
	I<<		I<<		
	>>I		>>I		
	<</<II/<I		<<		
	>>/II/>I		>>		

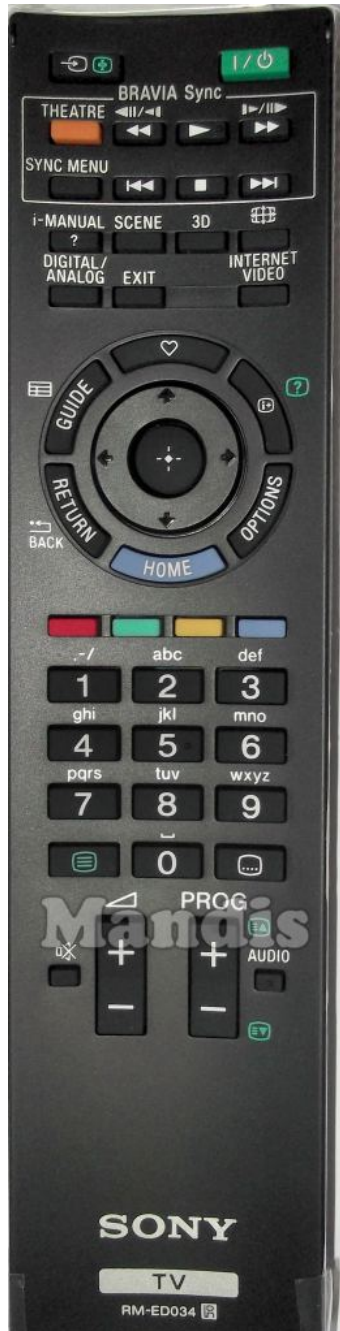