 







 



 



 





 









 



 







 



 









 













 

 

 

 



Original		Replacement		Original		Replacement	
	Power		Power		Mute		Mute / Dimmer
	3D		Shift + 3		P+		CH+ / Page+
	TV		Shift + 1		Vol-		Vol-
	TV		TV/Radio /		P-		CH- / Page-
	1		1		Info		Info / Angle
	2		2		Option		Setup / OPT /
	3		3		Smart Tv		Smart / List
	4		4		Guide		Guide / EPG / -/-
	5		5		Menu		Menu / Home
	6		6		Up		Up
	7		7		Left		Left
	8		8		OK		OK
	9		9		Right		Right
	Eco		Display / Media		Back		Back / Return
	0		0		Down		Down
	Source		AV / Input / RDS		Exit		Exit / Cancel / Clear
	Vol+		Vol+		Zoom-		Shift + Down





Original	Replacement
 Zoom+	 Shift + Up
 @/Home	 D.Menu / Top
 Sleep	 Sleep / Timer
 Pre-CH	 Shift + Back / Return
 FAV	 Fav / Marker / PC
 List	 Shift + Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 OO/Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 I<	 I<< / Preset-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement
 >	 >> / Preset+
 <<	 << / Tune-
 Rec	 Rec / Rec Mode
 >>	 >> / Tune+

