


 


 








 






Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Replacement	Original	Replacement
 Power	 Power	 TV	 AUX
 Mute	 Mute	 DVD	 REC MODE
 1	 1	 SAT	 PLAY MODE
 2	 2	 AUX	 PAUSE
 3	 3	 GUIDE	 STOP
 4	 4	 EXIT	 DISC NAV
 5	 5	 Up	 SOUND
 6	 6	 Down	 AD
 7	 7	 Right	 SETTINGS
 8	 8	 Left	 LIST
 9	 9	 OK	 DUAL
 0	 0	 I<<	 SUBT
 FAV	 Shift + Pre Ch	 >>I	 OPT
 Recall	 Pre Ch	 Ch +	 PROG
 Game	 Media	 Ch -	 SEARCH
 Auto	 Smart	 Vol -	 PICTURE
 Info	 Info	 Vol +	 ECO
		 Red	 SLEEP
		 Green	 TV/R
		 Yellow	 FORMAT
			 3D
			 E-MANUAL
			 REPEAT
			 ZOOM
			 TIMER
			 D.MENU
			 TEXT
			 AV
			 TOP MENU
			 DISPLAY
			 MENU
			 INFO
			 CLEAR
			 EXIT
			 RETURN
			 BACK
			 HOME
			 SMART
			 APP
			 MEDIA
			 VOL +
			 CH -
			 1
			 2
			 3
			 4
			 5
			 6
			 7
			 8
			 9
			 GUIDE
			 0
			 PRE-CH
			 A
			 B
			 C
			 D
			 Mandis SHOP
			 www.mandis.tv



