






 



 





 



 

 

 
 
 

 







 



 

 

 

 

 



 







 



 








Original	Replacement	Original	Replacement
 Power	 Power	 TXT/MIX	 Text
 Sleep	 Sleep	 Play	 Play
 Mute	 Mute	 Pause	 Pause
 Mode	 Media	 Stop	 Stop
 1	 1	 Rec	 Rec
 2	 2	 >>/Index	 >>
 3	 3	 <</Hold	 <<
 4	 4	 I<<	 I<<
 5	 5	 >>I	 >>I
 6	 6	 Cancel	 Exit
 7	 7	 Menu	 Menu
 8	 8	 DTV/Radio	 TV/R
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 -/--	 Shift + Guide	 Up	 Up
 Back	 Back	 Down	 Down
 Nicam/A2	 Dual	 Right	 Right








 
 






 

 
 



Original	Replacement
	 Left
	 Ok
	 Ch +
	 Ch -
	 Pre Ch
	 Guide
	 Info
	 List
	 Red
	 Green
	 Yellow
	 Blue
	 Format
	 3D
	 Subt
	 AV
	 Shift + Ch +

Original	Replacement
	 Shift + Ch -



 



 








Original	Replacement	Original	Replacement
Power		Power	
Mute		Mute	
[I]/Menu		Menu	
Exit		Exit	
Source		AV	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Subtitle		Subt	
Text		Text	

Original	Replacement	Original	Replacement
Vol+		Vol +	
Vol-		Vol -	
CH+		Ch +	
CH-		Ch -	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
OK		Ok	
Recall		Back	
Info		Info	
EPG		Guide	
Freeze		Options	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	





Original	Replacement	Original	Replacement
Audio	 Dual		
I<</[≡+]	 I<<		
>>I/[≡..]	 >>I		
[≡i]	 Smart		
Play	 Play		
Pause	 Pause		
Stop	 Stop		
REP/Rec	 Rec		
<</[≡o]	 <<		
>>/[≡?]	 >>		
FAV	 Pre Ch		

