
 






Original	Replacement	Original	Replacement
 Power	 Power	 [=i]/Index	 Options
 Direct Tv Rec	 TV/R	 [=+]/Hold	 Format
 Guide	 Guide	 1	 1
 Tv/Av	 AV	 2	 2
 Menu	 Menu	 3	 3
 Exit	 Exit	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 OK	 Ok	 9	 9
 Red	 Red	 0/VCR	 0
 Green	 Green	 C	 Back
 Yellow	 Yellow	 i	 Info
 Blue	 Blue	 CH+	 Ch +
 [=]/Text	 Text	 CH-	 Ch -
 [=◇]/F.P.	 Subt	 Vol+	 Vol +





Original	Replacement
Vol-	Vol -
Mute	Mute
[+]/Aspect	3D
N	Pre Ch
Power VCR	Shift + Power
Rec VCR	Rec
Programme+	Shift + Ch +
Programme-	Shift + Ch -
>>/>>I VCR	>>
<</<< VCR	<<
Play VCR	Play
Pause/Step VCR	Pause
Stop VCR	Stop
Power DVD	Smart
Rec DVD	Shift + Rec
Programme+	Shift + Up
Programme-	Shift + Down

Original	Replacement
>>/>>I DVD	>>I
<</<< DVD	I<<
Play DVD	Shift + Play
Pause/Step DVD	Shift + Pause
Stop DVD	Shift + Stop



DVD