



Original	Replacement	Original	Replacement
 Power	 Power	 Red / Menu	 Red
 ><>	 Shift + Menu	 Red / Menu	 Shift + Format
 Source	 AV	 Green / Menu	 Green
 I - II	 Dual	 Green / Menu	 Shift + Dual
 Subtitles	 Subt	 Yellow / Other	 Yellow
 [i+]	 Info	 Yellow / Other	 Menu
 [?]	 D. Menu	 Blue / OK	 Blue
 Mix	 TV/R	 Blue / OK	 Ok
 Zoom	 Eject	 Special Audio	 Shift + Subt
 Time	 Shift + AV	 Text	 Text
 [PP]	 Back	 P -	 Ch -
 DNR	 Options	 P +	 Ch +
 Mosaic	 Guide	 Vol -	 Vol -
 Up	 Up	 Vol +	 Vol +
 Down	 Down	 1	 1
 Right	 Right	 2	 2
 Left	 Left	 3	 3





Original	Replacement	Original	Replacement
 Power	 Power	 Stop	 Stop
 Time	 TV/R	 Play	 Play
 Zoom	 3D	 Timer	 Shift + AV
 Mix	 Text	 P-	 Ch -
 [?]	 Shift + Info	 P +	 Ch +
 [i+]	 Info	 1	 1
 Freeze/Rec	 Pause	 2	 2
 Format/Stop	 Format	 3	 3
 Source	 AV	 4	 4
 I-II	 Dual	 5	 5
 Up	 Up	 6	 6
 Down	 Down	 7	 7
 Right	 Right	 8	 8
 Left	 Left	 9	 9
 Rec	 Rec	 0	 0
 <<	 <<	 -/--	 Guide
>>	>>		

