
 
 
 






 




 






Original		Replacement		Original		Replacement	
	Power		Power		Yellow		Yellow
	Play		Play		Blue		Blue
	Pause		Pause		CH+		Ch +
	<<		<<		CH-		Ch -
	>>		>>		Source		AV
	I<<		I<<		Vol+		Vol +
	>>I		>>I		Vol-		Vol -
	Stop		Stop		Menu		Menu
	TV/TXT		Text		Rec		Rec
	Cancel		Eject		Up		Up
	Reveal		D. Menu		Down		Down
	Hold		Media		Right		Right
	Size		3D		Left		Left
	Subpage		Shift + Subt		OK		Ok
	Index		List		DVB		Smart
	Red		Red		Exit		Exit
	Green		Green		1		1





Original		Replacement		Original		Replacement	
2	2	2	2	FAV	FAV	FAV PRE-CH	Pre Ch
3	3	3	3	FAV+	FAV+	SHIFT + + CH	Shift + Ch +
4	4	4	4	FAV-	FAV-	SHIFT + - CH	Shift + Ch -
5	5	5	5	SUBTITLE	Subtitle	AD SUBT	Subt
6	6	6	6	PIC FORMAT	Pic Format	PICTURE FORMAT	Format
7	7	7	7	TEXT	Text	SHIFT + REPEAT TEXT	Shift + Text
8	8	8	8	DISPLAY	Display	DISPLAY INFO	Info
9	9	9	9	LANGUAGE	Language	SOUND DUAL	Dual
0	0	0	0	EPG	EPG	GUIDE	Guide
-/--	-/--	SHIFT + -/-- GUIDE	Shift + Guide				
Recall	Recall	RETURN BACK	Back				
PICTURE	Picture	SHIFT + PICTURE FORMAT	Shift + Format				
SOUND	Sound	SHIFT + SOUND DUAL	Shift + Dual				
NICAM/A2	Nicam/A2	SETTINGS OPT	Options				
MUTE	Mute	MUTE	Mute				
SLEEP	Sleep	PROG SLEEP	Sleep				
TV/RADIO	Tv/Radio	SEARCH TV/R	TV/R				

