



Original	Replacement	Original	Replacement
On/Standby	Power	I<</<</Preset Down/Tuning/Curs	<<
Clear/Dimmer	Exit	I<</<</Preset Down/Tuning/Curs	I<<
Memory	TV/R	Tuning/Cursor Right/Presets	Right
Tuner	Red	Tuning/Cursor Right/Presets	>>
CD	Green	Tuning/Cursor Right/Presets	>>I
CD Stop	Stop	Mode	Options
CD Play / Pause	Pause	Enter	Ok
CD Play / Pause	Play	Display	Info
USB / Audio In	Yellow	Folder	Smart
USB Rec	Rec	Clock/Timer	Sleep
USB Stop	Shift + Stop	RDS ASPM	Text
USB Play / Pause	Shift + Pause	RDS PTY	Eject
USB Play / Pause	Shift + Play	RDS Display	AV
Play Mode	List	1	1
Tuning/Cursor Up	Up	2	2
Tuning/Cursor	Down	3	3
I<</<</Preset Down/Tuning/Curs	Left	4	4

or Left



