
 
 

 

 
 
 
 
 



 
 
 
 


 
 


 






 




Original		Replacement		Original		Replacement	
	On/Off		Power		Sound		Dual
	Mute		Mute		Source		AV
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		Menu		Menu
	4		4		Exit		Exit
	5		5		Back		Back
	6		6		FAV		Shift + Pre Ch
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	Tv Guide		Guide		OK		Ok
	Recall		Pre Ch		Info		Info
	Vol+		Vol +		Text		Text
	Vol-		Vol -		Subtitle		Subt
	Picture		Format		TV		TV/R





Original	Replacement	Original	Replacement
 You Tube	 Media		
 Netflix	 Shift + Media		
 Smart	 Smart		
 Rec/DVD Menu	 Rec		
 I<<	 I<<		
 >>I	 >>I		
 Stop	 Stop		
 Rec List/DVD	 List		
 <<	 <<		
 >>	 >>		
 Play	 Play		
 Pause	 Pause		
 Red/Goto	 Red		
 Green/A-B	 Green		
 Yellow/Angle	 Yellow		
 Blue/Repeat	 Blue		

