

 




 



 






















 


 






 







 
 

 











 





 













	Original	Replacement		Original	Replacement
	Power		Power		Scan >>
	DVD		Blue		I<< Skip
	HDD		Yellow		Skip >>I
	Open/Close		Eject		Pause/Step
	1		1		Play
	2		2		Stop
	3		3		Home
	4		4		Menu/List
	5		5		Return
	6		6		Display
	7		7		PR/CH+
	8		8		PR/CH-
	9		9		Up
	0		0		Down
	Tv/DVD		TV/R		Right
	AV input		AV		Left
	<< Scan		<<		Enter
					Ok





Original	Replacement	Original	Replacement
 TITLE	Title	 DISC NAV LIST	List
 AUDIO	O)))/Audio	 SOUND DUAL	Dual
 MARKER	Marker	 PICTURE FORMAT	Format
 CLEAR	Clear	 CLEAR EXIT	Exit
 REC	Rec	 REC MODE	Rec
 REPEAT	Repeat	 REPEAT TEXT	Text
 *	*	 APP MEDIA	Media
 TIMESHIFT	Timeshift	 AD SUBT	Subt
 TV POWER	Power Tv	 SHIFT + 	Shift + Power
 AVINPUT	AV Input Tv	 SHIFT + 	Shift + AV
 PR/CH+	PR/CH+ Tv	 SHIFT + 	Shift + Ch +
 PR/CH-	PR/CH- Tv	 SHIFT + 	Shift + Ch -
 VOL+	Vol+ Tv		Vol +
 VOL-	Vol- Tv		Vol -

