





 


 

 





 

 
 


 




 
 









Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 +  Shift + Guide
 Recall	 Back
 Sleep	 Sleep
 Nicam / A2	 Dual
 DVB	 Media

Original	Replacement
 TV / AV	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Cyan	 Blue
 16:9	 Format
 TXT / CC	 Text
 Display	 Info
 Picture	 +  Shift + Format
 Menu	 Menu
 Up / CH +	 Up
 Up / CH +	 Ch +
 Down / CH -	 Down
 Down / CH -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left





Original	Replacement	Original	Replacement
	VOL - Vol -		Hold Stop
	OK Ok		Subtitle Subt
	SHIFT + SOUND DUAL Shift + Dual		Reveal Options
	CLEAR EXIT Exit		
	E-MANUAL D.MENU D. Menu		
	FAV PRE-CH Pre Ch		
	-/-- GUIDE Guide		
	SHIFT + + CH Shift + Ch +		
	SHIFT + - CH Shift + Ch -		
	DISC NAV LIST List		
	SEARCH TV/R TV/R		
	Pause Pause		
	ECO 3D 3D		
	HOME SMART Smart		
	SHIFT + AD SUBT Shift + Subt		
	ZOOM Eject		
	SHIFT + CLEAR EXIT Shift + Exit		

