 
 
 





 
 
 
 
 

 



 
 

 




Original	Replacement	Original	Replacement
 AVR/AVC On	 Power	 << Deck-VCR	 Shift + <<
 AVR/AVC Off	 Shift + Power	 < Deck-VCR	 Shift + Play
 Power Tv	 TV/R	 Deck-VCR >	 Shift + Pause
 Power VCR	 Smart	 Deck-VCR >>	 Shift + >>
 Power DVD/VDP	 Media	 Stop Deck-VCR	 Shift + Stop
 PHONO	 1	 CH+	 Ch +
 CD	 2	 CH-	 Ch -
 DVD/VDP	 3	 Disc Skip+	 Blue
 VCR-1	 4	 Play CD/MD/CDR-DVD/	 Play
 VCR-2 / V.AUX	 5	 Stop CD/MD/CDR-DVD/	 Stop
 TV/DBS	 6	 Pause CD/MD/CDR-DVD/	 Pause
 MD/Tape Mon	 7	 CD/MD/CDR-DVD/ VDP >>I	 >>I
 Tuner	 8	 I<< CD/MD/CDR-DVD/	 I<<
 Shift	 9	 CD/MD/CDR-DVD/ VDP >>	 >>
 Video Select	 0	 << CD/MD/CDR-DVD/	 <<
 Input Mode	 Guide	 System/Setup	 Menu
 Surround Mode	 Pre Ch	 Surround/Menu	 D. Menu





 

 




Original	Replacement	Original	Replacement
 T.Tone/Return	 Back		
 Status/Display	 Info		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 CH.Select/Select	 Ok		
 Master Volume	 Vol +		
 Master Volum	 Vol -		
 Muting	 Mute		
 Tv Vol+	 Shift + Vol +		
 Tv Vol-	 Shift + Vol -		
 Tv CH+	 Shift + Ch +		
 Tv CH-	 Shift + Ch -		


 




 
 
 
 



 

 


 









 
 



 




 
 
 
 
 




Original		Replacement		Original	Replacement
	AVR/AVC On		Power		
	AVR/AVC Off	 + 	Shift + Power		
	Play CD/MD/CDR-DVD/		Play		
	Pause CD/MD/CDR-DVD/		Pause		
	Stop CD/MD/CDR-DVD/		Stop		
	CD/MD/CDR-DVD/ VDP >>I		>>I		
	I<< CD/MD/CDR-DVD/		I<<		
	CD/MD/CDR-DVD/ VDP >>		>>		
	<< CD/MD/CDR-DVD/		<<		





Original	Replacement	Original	Replacement
 AVR/AVC On	 Power	 T.Tone/Return	 Back
 AVR/AVC Off	 Shift + Power	 Status/Display	 Info
 CH+	 Ch +	 Up	 Up
 CH-	 Ch -	 Down	 Down
 Deck-VCR >>	 >>	 Right	 Right
 << Deck-VCR	 <<	 Left	 Left
 Deck-VCR >	 Shift + Pause	 CH.Select/Select	 Ok
 Stop Deck-VCR	 Shift + Stop		
 Title	 Exit		
 Disc Skip+ CD/MD/CDR-DVD/	 Blue		
 Play CD/MD/CDR-DVD/	 Play		
 Pause CD/MD/CDR-DVD/	 Pause		
 Stop CD/MD/CDR-DVD/	 Stop		
 CD/MD/CDR-DVD/ VDP >>I	 >>I		
 I<< CD/MD/CDR-DVD/	 I<<		
 System/Setup	 Menu		
 Surround/Menu	 D. Menu		

