 




 



 
 
 

 



 

 
 


 
 

 

 



 
 
 
 
 

 
 
 

 

 
 
 
 

 
 

 
 
 

 

 
 












Original	Replacement	Original	Replacement
 Power	 Power	 Vol -	 Vol -
 1	 1	 Vol +	 Vol +
 2	 2	 TV / Video	 TV/R
 3	 3	 P.Mode	 Format
 4	 4	 S.Mode	 Dual
 5	 5	 Pre-CH	 Pre Ch
 6	 6	 Sleep	 Sleep
 7	 7	 Clear	 Exit
 8	 8	 P.Size	 Eject
 9	 9	 << REW	 <<
 0	 0	 Play	 Play
 +100	 Guide	 >> FF	 >>
 Display	 Info	 Pause	 Pause
 Mute	 Mute	 Stop	 Stop
 Menu	 Menu	 TRK Up	 >>I
 CH+	 Ch +	 TRK Up	 Up
 CH-	 Ch -	 TRK Down	 I<<



