







 




 



 









 









 

 




 







 
 
 




 

 

 








Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 [i+]	 Info	 Left	 Left
 Text ↑ / Stop	 Stop	 OK	 Ok
 Text ↑ / Stop	 Shift + Ch +	 Right	 Right
 Text ↑ / Stop	 Text	 Down	 Down
 Red / <<<	 <<<	 Exit	 Exit
 Red / <<<	 Red	 Back	 Back
 Green / Pause	 Pause	 Vol+	 Vol +
 Green / Pause	 Green	 Vol-	 Vol -
 Yellow / Opt / Play	 Options	 Mute	 Mute
 Yellow / Opt / Play	 Yellow	 P+	 Ch +
 Yellow / Opt / Play	 Play	 P-	 Ch -
 Blue ↓ / >>>	 Blue	 1	 1
 Blue ↓ / >>>	 >>>	 2	 2
 Blue ↓ / >>>	 Shift + Ch -	 3	 3
 EPG	 Guide	 4	 4
 List	 List	 5	 5



 
 




 








 



 









 

 










 

 
 




 


 



 












Original		Replacement		Original		Replacement	
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	I-II		Dual				
	TV / Radio		TV/R				
	[ _ ]		Subt				
	V-Format		Format				
	V-Output		AV				
	[< >]		Shift + Format				
	Menu		Menu				
	Timer		Shift + AV				

 
 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 OK	 Ok
 [i+]	 Info	 Right	 Right
 Text ↑ / Stop	 Stop	 Down	 Down
 Text ↑ / Stop	 Shift + Ch +	 Exit	 Exit
 Text ↑ / Stop	 Text	 Back	 Back
 Red / <<	 Red	 Vol+	 Vol +
 Red / <<	 <<	 Vol-	 Vol -
 Green / Pause	 Pause	 Mute	 Mute
 Green / Pause	 Green	 P+	 Ch +
 Yellow / Opt / Play	 Yellow	 P-	 Ch -
 Yellow / Opt / Play	 Options	 1	 1
 Yellow / Opt / Play	 Play	 2	 2
 Blue ↓ / >>	 Blue	 3	 3
 Blue ↓ / >>	 >>	 4	 4
 Blue ↓ / >>	 Shift + Ch -	 5	 5
 Up	 Up	 6	 6
 Left	 Left	 7	 7










 




















 








 



 

 
 


 






 


 


 
 








Original		Replacement		Original		Replacement	
	8		8				
	9		9				
	0		0				
	V-Output		AV				
	[< >]		Format				
	Menu		Menu				
	I-II		Dual				



 

 


 
 


Original		Replacement		Original		Replacement	
	DVD Power		Power		DVD Down		Down
	VCR Power		Shift + Power		DVD Exit		Exit
	DVD [i+]		Info		DVD Vol+		Vol +
	VCR Stop		Shift + Stop		DVD Vol-		Vol -
	DVD Stop		Stop		VCR Mute		Shift + Mute
	VCR <<		Shift + <<		DVD Mute		Mute
	DVD <<		<<		DVD P+		Ch +
	VCR Pause		Shift + Pause		VCR P+		Shift + Ch +
	DVD Pause		Pause		DVD P-		Ch -
	VCR Play		Shift + Play		VCR P-		Shift + Ch -
	DVD Play		Play		DVD 1		1
	DVD >>		>>		VCR 1		Shift + 1
	VCR >>		Shift + >>		DVD 2		2
	DVD Up		Up		VCR 2		Shift + 2
	DVD Left		Left		VCR 3		Shift + 3
	DVD OK		Ok		DVD 3		3
	DVD Right		Right		DVD 4		4





	Original	Replacement
	VCR 4	 +  Shift + 4
	DVD 5	 5
	VCR 5	 +  Shift + 5
	DVD 6	 6
	VCR 6	 +  Shift + 6
	VCR 7	 +  Shift + 7
	DVD 7	 7
	DVD 8	 8
	VCR 8	 +  Shift + 8
	DVD 9	 9
	VCR 9	 +  Shift + 9
	VCR 0	 +  Shift + 0
	DVD 0	 0
	VCR I-II	 DUAL Dual
	DVD [ _ ]	 SUBT Subt
	VCR V-Output	 +  AV Shift + AV
	DVD V-Output	 AV AV

	Original	Replacement
	DVD [ <   > ]	 FORMAT Format
	VCR [ <   > ]	 +  FORMAT Shift + Format
	DVD Menu	 MENU Menu





Original		Replacement		Original		Replacement	
	Power		Power		3		3
	<<		<<		4		4
	Pause		Pause		5		5
	Play		Play		6		6
	>>		>>		7		7
	Up		Up		8		8
	Left		Left		9		9
	OK		Ok		0		0
	Right		Right		V-Output		AV
	Down		Down		[< >]		Format
	Vol+		Vol +		Menu		Menu
	Vol-		Vol -				
	Mute		Mute				
	P+		Ch +				
	P-		Ch -				
	1		1				
	2		2				

