










	Original	Replacement		Original	Replacement
	 Power	 Power		 Right	 Right
	1	 1		 Vol+	 Vol +
	2	 2		 Left	 Left
	3	 3		 Vol-	 Vol -
	4	 4		 OK	 Ok
	5	 5		 TV	 TV/R
	6	 6		 MENU	 Menu
	7	 7		 ?	 Smart
	8	 8		 A	 Red
	9	 9		 B	 Green
	0	 0		 Blue/Picture Up	 Shift + Up
	-/--	 GUIDE	Guide	 Blue/Picture Down	 Shift + Down
	Mute	 MUTE	Mute	 Yellow/Sound	 Shift + Right
	Up	 Up	Up	 Yellow/Sound	 Shift + Left
	P+	 Ch +	Ch +	 White Up	 Blue
	Down	 Down	Down	 White Down	 Yellow
	P-	 Ch -	Ch -	 Sleep	 Sleep

	Original	Replacement		Original	Replacement
	 Power	 Power		 Right	 Right
	1	 1		 Vol+	 Vol +
	2	 2		 Left	 Left
	3	 3		 Vol-	 Vol -
	4	 4		 OK	 Ok
	5	 5		 TV	 TV/R
	6	 6		 MENU	 Menu
	7	 7		 ?	 Smart
	8	 8		 A	 Red
	9	 9		 B	 Green
	0	 0		 Blue/Picture Up	 Shift + Up
	-/--	 GUIDE	Guide	 Blue/Picture Down	 Shift + Down
	Mute	 MUTE	Mute	 Yellow/Sound	 Shift + Right
	Up	 Up	Up	 Yellow/Sound	 Shift + Left
	P+	 Ch +	Ch +	 White Up	 Blue
	Down	 Down	Down	 White Down	 Yellow
	P-	 Ch -	Ch -	 Sleep	 Sleep





Original	Replacement	Original	Replacement
AV	AV	Rec VTR	Rec
Text Info	Info	AV VTR	Shift + AV
Text Info	Text		
← PRG	Back		
♪	Dual		
[◆]	Format		
	Pause		
Power VTR	Shift + Power		
Timer VTR	Pre Ch		
>> VTR	>>		
<< VTR	<<		
Play VTR	Play		
Stop VTR	Stop		
Pause VTR	Shift + Pause		
Step VTR	Shift + Play		
>>I VTR	>>I		
I<< VTR	I<<		

Original	Replacement
Rec VTR	Rec
AV VTR	Shift + AV

