


 

 

 




 

 
 







 



 

 

 

 

 

 

 



 







 
 



 
 

 



 








Original		Replacement		Original		Replacement	
	Power		Power		8		8
	Sleep		Sleep		9		9
	Open/Close		Eject		0		0
	Mute		Mute		Title/Rotate		Guide
	V.Sel		Smart		Menu		Menu
	AV		AV		Info		Info
	DVD		Media		Exit		Exit
	Tuner		TV/R		I<		I<<
	Mode		Format		>I		>>I
	Tone		Subt		<<		<<
	1		1		>>		>>
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Vol+		Vol +





Original	Replacement	Original	Replacement
 Vol-	 Vol -		
 Stop/FM Mode	 Stop		
 Play	 Play		
 Pause/RDS Search	 Pause		
 RDS/Disp/Clear	 Options		

