




Original	Replacement
	 Eject / Surround
	 Power
	 Display / Media
	 Picture / Format
	 Audio / Lang I/II
	 Smart / List
	 Exit / Cancel / Clear
	 TV/Radio /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9

Original	Replacement
	 Guide / EPG / -/--
	 0
	 AV / Input / RDS
	 Vol+
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 Rec / Rec Mode
	 Shift + Slow Play /
	 Shift + Tune+ >> /
	 D.Menu / Top
	 I<< / Preset-
	 >>I / Preset+
	 Menu / Home
	 Up
	 Pause / Step / Freeze
	 Sleep / Timer





Original	Replacement	Original	Replacement
	Left		Left
	<<		<< / Tune-
	OK		OK
	Play		Play / Slow
	Right		Right
	>>		>> / Tune+
	Down		Down
	Stop		Stop / Hold

Original	Replacement	Original	Replacement





Original	Replacement
Power	Power
Display	Display / Media
Format	Picture / Format
Audio Monitor	Audio / Lang I/II
TV / Video	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Guide / EPG / -/--
0	0
Vol+	Vol+

Original	Replacement
Prog+	CH+ / Page+
Vol-	Vol-
Prog-	CH- / Page-

