





 













 











 












 




 

 









Original	Replacement	Original	Replacement
	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disp		Display / Media
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+

Original	Replacement	Original	Replacement
	Vol-		Vol-
	Mouse		Smart / List
	CH-		CH- / Page-
	P.Mode		Picture / Format
	Home		Shift + Menu /
	S.Mode		Sound / Title
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Enter		OK
	Right		Right
	Netflix		Shift + Red / Netflix /
	Down		Down
	YouTube		Shift + Yellow / YouTube /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





	Original	Replacement	Original	Replacement
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	Play/Pause	Play / Slow		
	Play/Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		
	<<	<< / Tune-		
	>>	>> / Tune+		
	I<<	I<< / Preset-		
	>>I	>>I / Preset+		
	USB	Shift + 8		
	Sleep	Sleep / Timer		

