





















 

 











 














Original	Replacement
 On	 Power
 Off	 Shift + Power
 Mute	 Mute / Dimmer
 AVR	 Shift + Smart / List
 DVD	 Shift + 2
 VID1	 Shift + 1
 HDMI1	 Shift + Guide / EPG / -/-
 AM/FM	 Shift + 6
 CD	 Shift + 3
 VID2	 Shift + 4
 HDMI2	 Shift + 0
 AUX	 Shift + 7
 Tape	 Shift + 5
 VID3	 Shift + 8
 HDMI3	 Shift + Fav / Marker / PC
 Sleep	 Sleep / Timer
 6CH	 Shift + 9

Original	Replacement
 Vol+	 Vol+
 Surr.	 Eject / Surround
 Test	 Text / Goto
 Vol-	 Vol-
 CH.	 Guide / EPG / -/-
 Up	 Up
 SPKR	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Digital	 Picture / Format
 Down	 Down
 Delay	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 4	 4















 



 













 




Original	Replacement	Original	Replacement
	5		5
	6		6
	7		7
	8		8
	Tun-M		Smart / List
	9		9
	0		0
	Mem		Info / Angle
	Tuning ▲		>> / Tune+
	Direct		Back / Return
	Clear		Exit / Cancel / Clear
	Preset ▲		>> / Preset+
	Tuning ▼		<< / Tune-
	Tone		Setup / OPT /
	RDS		AV / Input / RDS
	Preset ▼		<< / Preset-
	Dolby Surr		Red / Netflix / Search

Original	Replacement	Original	Replacement
	DTS Surr.		Green / APP / Repeat
	DTS Neo 6		Yellow / YouTube / Repeat
	Night		Shift + Sleep / Timer
	Logic 7		Shift + Blue / Prime / Prime
	Stereo		Blue / Prime Video / Random
	DIM		D.Menu / Top





Original	Replacement
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Disc Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Menu	 Menu / Home
 Status	 Display / Media
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Playlist	 Smart / List
 I<</Skip Down	 I<< / Preset-
 Skip Up/>>I	 >>I / Preset+
 << DVD	 << / Tune-
 > DVD	 Play / Slow
 >> DVD	 >> / Tune+
 Open / Close	 Eject / Surround
 Stop DVD	 Stop / Hold

Original	Replacement
 Pause DVD	 Pause / Step / Freeze

