







 





























Original	Replacement
 Power	 Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Return	 Back / Return
 PR+	 CH+ / Page+
 >>	 >> / Preset+
 <<	 << / Preset-
 PR-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Red	 Red / Netflix / Search

 
Original	Replacement
 Sound	 Sound / Title
 Green	 Green / APP / Repeat
 List	 Shift +  Smart / List
 Yellow	 Yellow / YouTube / Repeat
 Info	 Info / Angle
 Mosaic	 Smart / List
 Blue	 Blue / Prime Video / Random
 Violet	 Display / Media
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





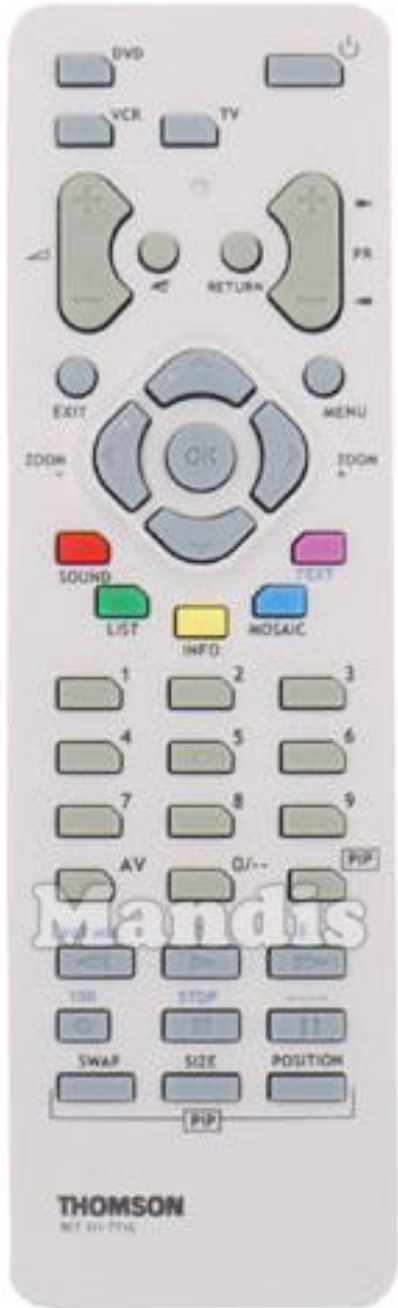



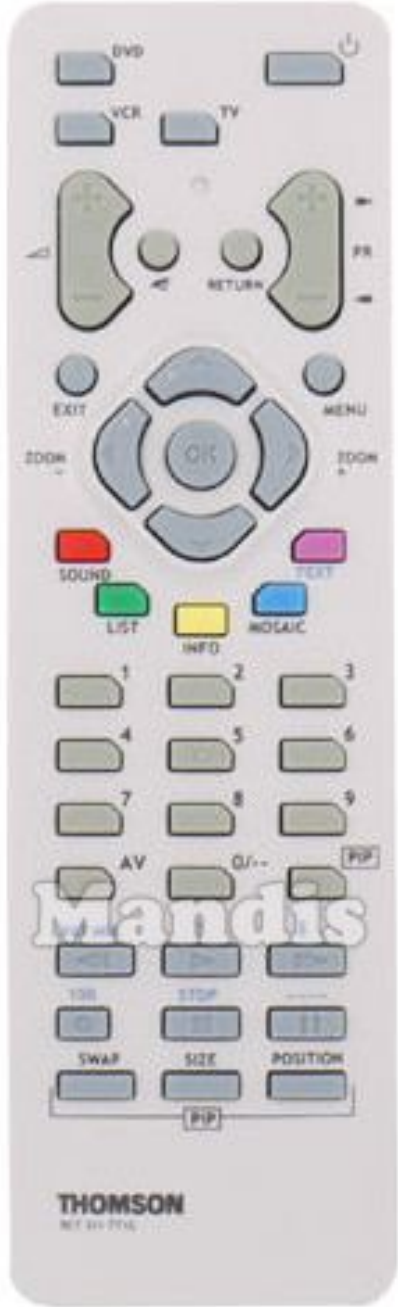
















Original	Replacement	Original	Replacement
 9	 9		
 0/-/-	 0		
 AV	 AV / Input / RDS		
 PIP	 Zoom / Size		
 <</Pat-Mix	 << / Tune-		
 Play/?	 Play / Slow		
 >>	 >> / Tune+		
 Rec/100	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Pause/----	 Pause / Step / Freeze		
 Swap PIP	 Setup / OPT /		
 Size PIP	 Picture / Format		
 Position PIP	 TV/Radio /		

 




Original	Replacement
 Power	 Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Return	 Back / Return
 PR+	 CH+ / Page+
 >>	 >> / Preset+
 PR-	 CH- / Page-
 <<	 << / Preset-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Red	 Red / Netflix / Search

Original	Replacement
 Sound	 Sound / Title
 Green	 Green / APP / Repeat
 List	 Shift + Smart / List
 Info	 Info / Angle
 Yellow	 Yellow / YouTube / Repeat
 Mosaic	 Smart / List
 Blue	 Blue / Prime Video / Random
 Violet	 Display / Media
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8




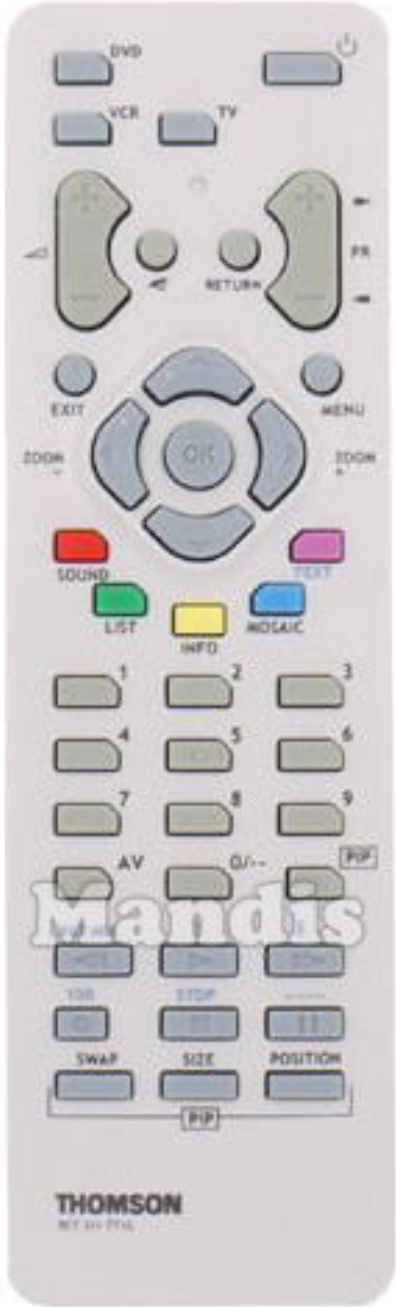






 


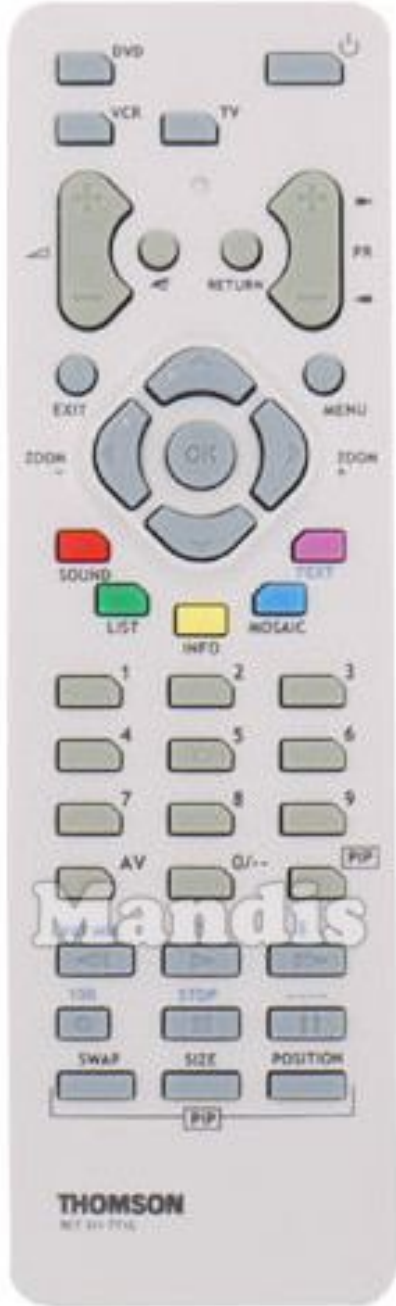
























Original	Replacement
9	9
0/-/--	0
AV	AV / Input / RDS
PIP	Zoom / Size
<< / Pat-Mix	<< / Tune-
Play/?	Play / Slow
>>	>> / Tune+
Rec/100	Rec / Rec Mode
Stop	Stop / Hold
Pause/----	Pause / Step / Freeze
Swap PIP	Setup / OPT /
Size PIP	Picture / Format
Position PIP	TV/Radio /

Original	Replacement

 


 





 

 

 

 
 
 

 



 

 
 


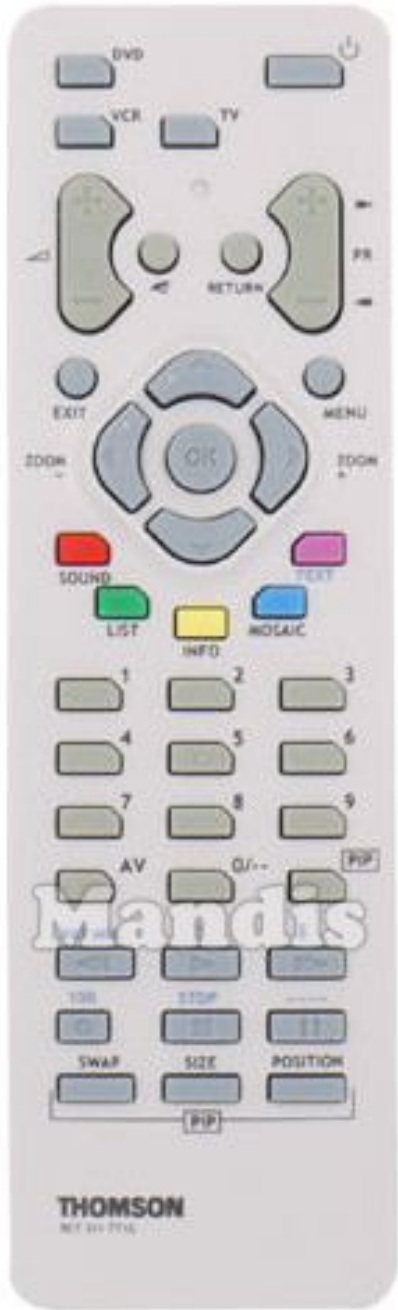Original	Replacement
 Power	 Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Return	 Back / Return
 PR+	 CH+ / Page+
 >>	 >> / Preset+
 <<	 << / Preset-
 PR-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Red	 Red / Netflix / Search

Original	Replacement
 Sound	 Sound / Title
 List	 Shift + Smart / List
 Green	 Green / APP / Repeat
 Info	 Info / Angle
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Mosaic	 Smart / List
 Violet	 Display / Media
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





	Original	Replacement	Original	Replacement
	9	 9		
	0/-/-	 0		
	AV	 AV / Input / RDS		
	PIP	 Zoom / Size		
	<</Pat-Mix	 << / Tune-		
	Play/?	 Play / Slow		
	>>	 >> / Tune+		
	Rec/100	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Pause/----	 Pause / Step / Freeze		
	Size PIP	 Picture / Format		
	Position PIP	 TV/Radio /		

