





















 

 













| Original | Replacement |
|---|---|
|  On |  Power |
|  Off |  Shift + Power |
|  Mute |  Mute / Dimmer |
|  AVR |  Shift + Smart / List |
|  DVD |  Shift + 2 |
|  VID1 |  Shift + 1 |
|  HDMI1 |  Shift + Guide / EPG / -/- |
|  AM/FM |  Shift + 6 |
|  CD |  Shift + 3 |
|  VID2 |  Shift + 4 |
|  HDMI2 |  Shift + 0 |
|  AUX |  Shift + 7 |
|  Tape |  Shift + 5 |
|  VID3 |  Shift + 8 |
|  HDMI3 |  Shift + Fav / Marker / PC |
|  Sleep |  Sleep / Timer |
|  6CH |  Shift + 9 |

| Original | Replacement |
|---|---|
|  Vol+ |  Vol+ |
|  Surr. |  Eject / Surround |
|  Test |  Text / Goto |
|  Vol- |  Vol- |
|  CH. |  Guide / EPG / -/- |
|  Up |  Up |
|  SPKR |  Menu / Home |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Digital |  Picture / Format |
|  Down |  Down |
|  Delay |  Fav / Marker / PC |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |





 

| Original | Replacement | Original | Replacement |
|------------|------------------------|-----------|------------------------------|
| 5 | 5 | DTS Surr. | Green / APP / Repeat |
| 6 | 6 | DTS Neo 6 | Yellow / YouTube / Repeat |
| 7 | 7 | Night | Shift + Sleep / Timer |
| 8 | 8 | Logic 7 | Shift + Blue / Prime / Prime |
| Tun-M | Smart / List | Stereo | Blue / Prime Video / Random |
| 9 | 9 | DIM | D.Menu / Top |
| 0 | 0 | | |
| Mem | Info / Angle | | |
| Tuning ▲ | >> / Tune+ | | |
| Direct | Back / Return | | |
| Clear | Exit / Cancel / Clear | | |
| Preset ▲ | >>I / Preset+ | | |
| Tuning ▼ | << / Tune- | | |
| Tone | Setup / OPT / | | |
| RDS | AV / Input / RDS | | |
| Preset ▼ | I<< / Preset- | | |
| Dolby Surr | Red / Netflix / Search | | |

| Original | Replacement |
|-----------|------------------------------|
| DTS Surr. | Green / APP / Repeat |
| DTS Neo 6 | Yellow / YouTube / Repeat |
| Night | Shift + Sleep / Timer |
| Logic 7 | Shift + Blue / Prime / Prime |
| Stereo | Blue / Prime Video / Random |
| DIM | D.Menu / Top |





| Original | Replacement |
|---|---|
|  Audio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  Disc Menu |  D.Menu / Top |
|  Setup |  Setup / OPT / |
|  Menu |  Menu / Home |
|  Status |  Display / Media |
|  Random |  Blue / Prime Video / Random |
|  Repeat |  Green / APP / Repeat |
|  A-B |  Yellow / YouTube / Repeat |
|  Playlist |  Smart / List |
|  I<</Skip Down |  I<< / Preset- |
|  Skip Up/>>I |  >>I / Preset+ |
|  << DVD |  << / Tune- |
|  > DVD |  Play / Slow |
|  >> DVD |  >> / Tune+ |
|  Open / Close |  Eject / Surround |
|  Stop DVD |  Stop / Hold |

| Original | Replacement |
|---|---|
|  Pause DVD |  Pause / Step / Freeze |

