



 

 









 





 

 

 

 



 





 





























 
 




 


 
 

 



Original	Replacement	Original	Replacement
	Power		Power
	Aspect		Picture / Format
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Repeat		Shift + Green / APP / APP /
	Vol +		Vol+
	S		D.Menu / Top

Original	Replacement	Original	Replacement
	CH +		CH+ / Page+
	Vol -		Vol-
	Audio		Audio / Lang I/II
	CH -		CH- / Page-
	i		Info / Angle
	Home		Shift + Menu /
	Mouse		Display / Media
	Menu		Menu / Home
	Up		Up
	Input		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search





Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Index / Stop	 Stop / Hold
 Hold / Play/Pause	 Play / Slow
 Hold / Play/Pause	 Pause / Step / Freeze
 Reveal / <<	 << / Tune-
 Size / >>	 >> / Tune+
 Fav	 Fav / Marker / PC
 TV.RD	 TV/Radio /
 Mix / I<<	 I<< / Preset-
 S.Page / >>I	 >>I / Preset+
 Text	 Text / Goto
 Cancel	 Shift + Exit / Cancel / Clear
 Guide	 Guide / EPG / -/--
 Rec	 Rec / Rec Mode

Original	Replacement

