




 

 



 



 

 

 
 
 

 



 
 


 









 





 

 



 


















Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		Pre Ch
	CH List		List
	EPG		Guide
	3D		3D
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Info		Info
	Menu		Menu
	Mute		Mute
	Exit		Exit
	Return		Back
	Media		Media
	Eco		Shift + 3D
	FAV		Shift + Pre Ch
	HiSmart@		Smart
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Original		Replacement		Original		Replacement	
	Red		Red		>>/Index		>>
	Green		Green		I<</Sub.Code		I<<
	Yellow		Yellow		>>I/Cancel		>>I
	Blue		Blue				
	Subt.		Subt				
	Text/Mix		Text				
	P.Mode	 + 	Shift + Format				
	Language/I/II		Dual				
	S.Mode	 + 	Shift + Dual				
	Size		Format				
	T.Shift		Sleep				
	Still/Reveal		Options				
	Rec/PVR		Rec				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	<</Hold		<<				

