



| Original   | Replacement   | Original  | Replacement  |
|--|---|---|--|
|  Power            |  Power         |  Yellow/Repeat |  Yellow         |
|  I<<              |  I<<           |  Blue/A-B      |  Blue           |
|  Open/Close       |  Eject         |  CH+           |  Ch +           |
|  <<               |  <<            |  CH-           |  Ch -           |
|  >>               |  >>            |  Tv-Menu       |  Menu           |
|  >>               |  >>            |  TV/AV         |  AV             |
|  Play/Pause       |  Play          |  Vol+          |  Vol +          |
|  TV/TXT/Language  |  Text          |  Vol-          |  Vol -          |
|  Cancel/Zoom      |  Shift + Eject |  DTV           |  Smart          |
|  Reveal/Subtitle |  Subt         |  DVD Setup    |  Shift + Menu  |
|  Stop           |  Stop        |  Exit        |  Exit         |
|  Hold/Menu      |  D. Menu     |  Display     |  Shift + Info |
|  Size/Angle     |  Format      |  Up          |  Up           |
|  Subpage/Title  |  Options     |  Down        |  Down         |
|  Index/Goto     |  Media       |  Right       |  Right        |
|  Red/Program    |  Red         |  Left        |  Left         |
|  Green/Slow     |  Green       |  OK          |  Ok           |



