 







 
 

 
 







 



 


 



 






 
 





 



 









 


 
 



 




Original	Replacement	Original	Replacement
 Power	 Power	 I<< Skip	 I<<
 PIP Audio	 3D	 Skip >>I	 >>I
 PIP	 Format	 Pause	 Pause
 Open/Close	 Eject	 Play	 Play
 1	 1	 Stop	 Stop
 2	 2	 Home	 Smart
 3	 3	 Disc menu	 D. Menu
 4	 4	 Return	 Back
 5	 5	 Display	 Info
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter	 Ok
 Clear	 Exit	 Audio	 Dual
 << Scan	 <<	 Subtitle	 Subt
 Scan >>	 >>	 On-Off	 Media





Original		Replacement		Original		Replacement	
	Title/Pop-Up		Options		*		List
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Marker		Pre Ch				
	Search		TV/R				
	Repeat		Text				
	Zoom		Shift + Eject				
	Tv Power		Shift + Power				
	AV/Input Tv		AV				
	PR/CH+ Tv		Ch +				
	PR/CH- Tv		Ch -				
	Vol+ Tv		Vol +				
	Vol- Tv		Vol -				
	Tv Mute		Mute				
	Resolution		Guide				

