


Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		ZAP		Smart / List
	Power		Power		Up / P+		Up
	Prog		TV/Radio /		Up / P+		CH+ / Page+
	I-II		Audio / Lang I/II		Right / Vol+		Right
	O to O		Sound / Title		Right / Vol+		Vol+
	PP		Back / Return		Left / Vol-		Left
	1		1		Left / Vol-		Vol-
	2		2		Normal		OK
	3		3		Down / P-		Down
	4		4		Down / P-		CH- / Page-
	5		5		Red / Memo		Red / Netflix / Search
	6		6		Green / Audio		Green / APP / Repeat
	7		7		Green / Audio		Shift + Audio / Lang I/II
	8		8		Yellow / Video		Yellow / YouTube / Repeat
	9		9		Blue / Extra		Blue / Prime Video / Random
	0		0		[ ]		Display / Media
	--		Guide / EPG / --		[ + ]		Stop / Hold

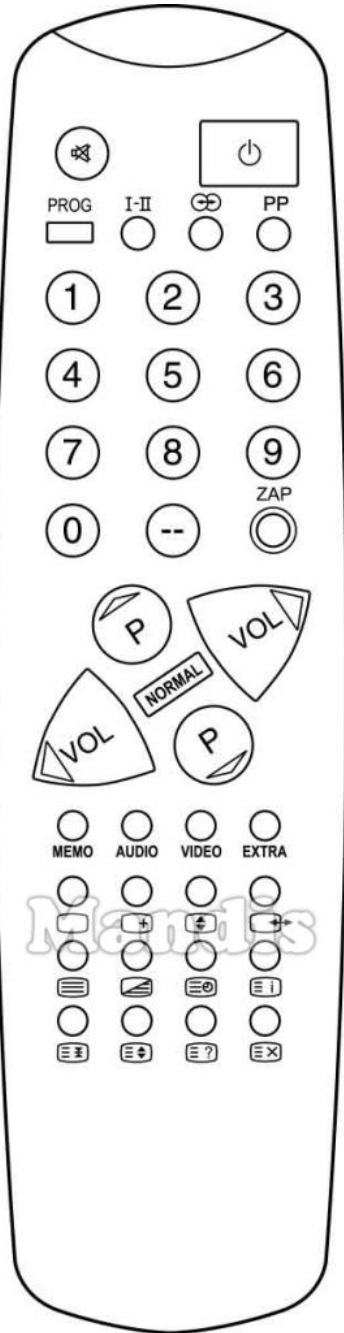



Original	Replacement	Original	Replacement
	[ ♦ ]		Setup / OPT /
	[ ]↔		D.Menu / Top
	[ ≡ ]		Text / Goto
	[ /≡ ]		Shift + Text /
	[ ≡○ ]		Subtitle / EQ
	[ ≡ i ]		Info / Angle
	[ ≡□ ]		Pause / Step / Freeze
	[ ≡♦ ]		Zoom / Size
	[ ≡? ]		AV / Input / RDS
	[ ≡X ]		Exit / Cancel / Clear

Original	Replacement

