






 

 



 

 



 

 


 


 



 



 



 

 




 






 





 




















	Original	Replacement		Original	Replacement
	 Power	 Power		 Right	 Right
	1	 1		 Vol+	 Vol +
	2	 2		 Left	 Left
	3	 3		 Vol-	 Vol -
	4	 4		 OK	 Ok
	5	 5		 TV	 TV/R
	6	 6		 Menu	 Menu
	7	 7		 ?	 Smart
	8	 8		 A	 Red
	9	 9		 B	 Green
	0	 0			 SHIFT +  Shift + Up
	-/--	 GUIDE	Guide		 SHIFT +  Shift + Down
	Mute	 MUTE	Mute		 SHIFT +  Shift + Right
	Up		Up		 SHIFT +  Shift + Left
	P+	 + CH	Ch +		 D Blue
	Down		Down		 C Yellow
	P-	 - CH	Ch -		 PROG SLEEP Sleep





Original	Replacement	Original	Replacement
 AV	 AV	 Rec VTR	 Rec
 Text Info	 Info	 AV VTR	 Shift + AV
 Text Info	 Text		
 ← PRG	 Back		
 Musical Note	 Dual		
 [♦]	 Format		
 II	 Pause		
 Power VTR	 Shift + Power		
 Timer VTR	 Pre Ch		
 >> VTR	 >>		
 << VTR	 <<		
 Play VTR	 Play		
 Stop VTR	 Stop		
 Pause VTR	 Shift + Pause		
 Step VTR	 Shift + Play		
 >>I VTR	 >>I		
 I<< VTR	 I<<		

Original	Replacement	Original	Replacement
 Rec VTR	 Rec		
 AV VTR	 Shift + AV		

