

 



 
 
 

 
 





 




 
 
 

 
 
 




 

 

 



 

 



 


 








 
 

 






 

 
 



 


 


 

 


 
 


Original	Replacement	Original	Replacement
	Power		Power
	[i]/Info		Info
	Mute		Mute
	I-II		Dual
	OK/Select		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-/+10	 + 	Shift + Guide
	Exit		Exit

Original	Replacement	Original	Replacement
	Menu		Menu
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio		Yellow
	Blue/Angle		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<





 


 





 



 


 



 


 
 



 



 



 

 

 



 



 



 

 

 

 



 




	Original	Replacement	Original	Replacement
	>>	 >>		
	[TV]	 TV/R		
	D-Menu	 Smart		
	TV	 Media		
	AV	 AV		
	P<P	 Pre Ch		
	PP	 D. Menu		
	[≡]	 Text		
	[≡o]	 Subt		
	[≡+]	 Format		
	[≡x]	 3D		
	[≡◆]/Wide	 Shift + Format		
	[≡?]	 Options		
	[≡i]/Guide	 Guide		
	[:::]/Subtitle	 Back		





Original	Replacement	Original	Replacement
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 D-Menu	 Smart
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 I<<	 I<<
 7	 7	 >>I	 >>I
 8	 8	 Time	 Shift + AV
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Program	 Sleep
 -/--/+10	 Guide	 Search Mode	 AV
 Exit	 Exit	 Repeat	 Text
 Red/↑/Return	 Red	 A-B	 Shift + Play
 Green/↓/Subtitle	 Green	 C	 Yellow
 Yellow/Audio	 Shift + Yellow	 Title	 Info
 Blue/Angle	 Blue	 Display	 Shift + Info





Original		Replacement	
	Open/Close		Eject
	Menu		Menu
	Select		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Original	Replacement

