







 




 



 









 









 

 




 







 
 
 




 

 

 




 


 
 

 
 


 


 
 
 
 





Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 [i+]	 Info	 Left	 Left
 Text ↑ / Stop	 Stop	 OK	 Ok
 Text ↑ / Stop	 Shift + Ch +	 Right	 Right
 Text ↑ / Stop	 Text	 Down	 Down
 Red / <<<	 <<<	 Exit	 Exit
 Red / <<<	 Red	 Back	 Back
 Green / Pause	 Pause	 Vol+	 Vol +
 Green / Pause	 Green	 Vol-	 Vol -
 Yellow / Opt / Play	 Options	 Mute	 Mute
 Yellow / Opt / Play	 Yellow	 P+	 Ch +
 Yellow / Opt / Play	 Play	 P-	 Ch -
 Blue ↓ / >>>	 Blue	 1	 1
 Blue ↓ / >>>	 >>>	 2	 2
 Blue ↓ / >>>	 Shift + Ch -	 3	 3
 EPG	 Guide	 4	 4
 List	 List	 5	 5



 
 




 








 



 









 

 










 

 
 




 


 



 












	Original	Replacement	Original	Replacement
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	I-II	 Dual		
	TV / Radio	 TV/R		
	[_]	 Subt		
	V-Format	 Format		
	V-Output	 AV		
	[< >]	 Shift + Format		
	Menu	 Menu		
	Timer	 Shift + AV		





Original	Replacement	Original	Replacement
 Power	 Power	 OK	 Ok
 [i+]	 Info	 Right	 Right
 Text ↑ / Stop	 Stop	 Down	 Down
 Text ↑ / Stop	 Shift + Ch +	 Exit	 Exit
 Text ↑ / Stop	 Text	 Back	 Back
 Red / <<<	 Red	 Vol+	 Vol +
 Red / <<<	 <<<	 Vol-	 Vol -
 Green / Pause	 Pause	 Mute	 Mute
 Green / Pause	 Green	 P+	 Ch +
 Yellow / Opt / Play	 Yellow	 P-	 Ch -
 Yellow / Opt / Play	 Options	 1	 1
 Yellow / Opt / Play	 Play	 2	 2
 Blue ↓ / >>>	 Blue	 3	 3
 Blue ↓ / >>>	 >>>	 4	 4
 Blue ↓ / >>>	 Shift + Ch -	 5	 5
 Up	 Up	 6	 6
 Left	 Left	 7	 7








 













 









 







 










 



 








 








	Original	Replacement		Original	Replacement
		8			8
		9			9
		0			0
		V-Output			AV
		[< >]			Format
		Menu			Menu
		I-II			Dual





 


Original		Replacement		Original		Replacement	
	DVD Power		Power		DVD Down		Down
	VCR Power		Shift + Power		DVD Exit		Exit
	DVD [i+]		Info		DVD Vol+		Vol +
	VCR Stop		Shift + Stop		DVD Vol-		Vol -
	DVD Stop		Stop		VCR Mute		Shift + Mute
	VCR <<		Shift + <<		DVD Mute		Mute
	DVD <<		<<		DVD P+		Ch +
	VCR Pause		Shift + Pause		VCR P+		Shift + Ch +
	DVD Pause		Pause		DVD P-		Ch -
	VCR Play		Shift + Play		VCR P-		Shift + Ch -
	DVD Play		Play		DVD 1		1
	DVD >>		>>		VCR 1		Shift + 1
	VCR >>		Shift + >>		DVD 2		2
	DVD Up		Up		VCR 2		Shift + 2
	DVD Left		Left		VCR 3		Shift + 3
	DVD OK		Ok		DVD 3		3
	DVD Right		Right		DVD 4		4

















 






 





 







 





 

 




 

 
 
 
 
 
 


Original	Replacement
4 VCR 4	SHIFT + 4 Shift + 4
5 DVD 5	5 5
5 VCR 5	SHIFT + 5 Shift + 5
6 DVD 6	6 6
6 VCR 6	SHIFT + 6 Shift + 6
7 VCR 7	SHIFT + 7 Shift + 7
7 DVD 7	7 7
8 DVD 8	8 8
8 VCR 8	SHIFT + 8 Shift + 8
9 DVD 9	9 9
9 VCR 9	SHIFT + 9 Shift + 9
0 VCR 0	SHIFT + 0 Shift + 0
0 DVD 0	0 0
I-II VCR I-II	SOUND DUAL Dual
DVD [_]	AD SUBT Subt
V-Output VCR V-Output	SHIFT + TIMER AV Shift + AV
V-Output DVD V-Output	TIMER AV AV

Original	Replacement
 DVD [< >]	PICTURE FORMAT Format
 VCR [< >]	SHIFT + PICTURE FORMAT Shift + Format
 DVD Menu	TOP MENU MENU Menu





Original	Replacement	Original	Replacement
	Power		Power
	<<		<<
	Pause		Pause
	Play		Play
	>>		>>
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	V-Output		AV
	[< >]		Format
	Menu		Menu

