

 
 




 

 



 
 



 


 

 








 


 
 

 

 
 
 








Original	Replacement	Original	Replacement
 Power	 Power	 D.Sub/Reveal	 Media
 Mute	 Mute	 D.Lan/Nicam/A2	 Dual
 Red/Title	 Red	 Tv/Radio	 TV/R
 Green/Goto	 Green	 FAV	 Pre Ch
 Yellow/Repeat	 Yellow	 Nothing	 Shift + Back
 Blue/A-B	 Blue	 Sleep	 Sleep
 <</Index	 <<	 Disp	 Info
 >>/Hold	 >>	 Input	 AV
 I<</Size	 I<<	 Menu	 Menu
 >>I/Subpage	 >>I	 Exit	 Exit
 Play	 Play	 Up	 Up
 Pause	 Pause	 Down	 Down
 Stop	 Stop	 Right	 Right
 Eject	 Eject	 Left	 Left
 Subtitle	 Subt	 OK	 Ok
 D.Set/Tv/TXT	 Text	 Vol+	 Vol +
 D.Menu/Cancel	 D. Menu	 Vol-	 Vol -





Original		Replacement	
EPG	EPG	GUIDE	Guide
CH.L	CH.L	DISC NAV LIST	List
▲ CH	CH+	+ CH	Ch +
▼ CH	CH-	CH -	Ch -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
-/--	-/--	SHIFT + -/-- GUIDE	Shift + Guide
↶	Recall	RETURN BACK	Back
PICTURE	Picture	PICTURE FORMAT	Format

Original		Replacement	
ASPECT	Aspect	ECO 3D	3D
SOUND	Sound	SHIFT + SOUND DUAL	Shift + Dual

