 




 



 
 
 

 



 

 
 


 
 

 

 



 
 
 
 
 

 
 
 

 

 
 
 
 

 
 

 
 
 

 

 
 








 







Original		Replacement		Original		Replacement	
	Power		Power		Vol -		Vol -
	1		1		Vol +		Vol +
	2		2		TV / Video		TV/R
	3		3		P.Mode		Format
	4		4		S.Mode		Dual
	5		5		Pre-CH		Pre Ch
	6		6		Sleep		Sleep
	7		7		Clear		Exit
	8		8		P.Size		Eject
	9		9		<< REW		<<
	0		0		Play		Play
	+100		Guide		>> FF		>>
	Display		Info		Pause		Pause
	Mute		Mute		Stop		Stop
	Menu		Menu		TRK Up		>>I
	CH+		Ch +		TRK Up		Up
	CH-		Ch -		TRK Down		I<<





Original	Replacement	Original	Replacement
 TRK Down	 Down		
 Still	 Ok		

