
 
 



 
 

 
 



 

 



 
 


 

 


 
 



 


 



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Options	Menu Off	 Exit
Reveal	 List	Menu Down	 Down
Info	 Info	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Chan.Up	 Ch +
Txt Stop	 Stop	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Contrast+	 Shift + Ch +
9	 9	Output	 Shift + Media
Guide -/-- 1.	 Guide	Contrast-	 Shift + Ch -
0/10	 0	3.*	 Shift + Guide
2.Fav P/C 2.	 Pre Ch	Audio-	 Shift + Vol -
Red	 Red	Audio+	 Shift + Vol +
Green	 Green	4.# 16:9	 Format
Yellow	 Yellow	Surround	 Shift + Red
Rotate Text	 Shift + Ok	Nicam/Mono	 Shift + Green
Mix Scan	 Shift + Text	Level L	 Shift + Yellow
On/Tim	 3D	Level R/Woofer	 Shift + Blue
Off/Tim	 Shift + 3D		
Blue	 Blue		
On/Off	 Shift + Power		
AV 2	 Shift + AV		
Input	 Media		
Browse	 Smart		

