


 



 



 

 

 

 

 



 





 









 

 







 



 

 







 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Prog-	 Ch -
 Open / Close	 Eject	 Time Slip	 Sleep
 Input Select	 AV	 Info	 Info
 HDMI	 Media	 Text	 Text
 1	 1	 Audio	 Dual
 2	 2	 Subtitle	 Subt
 3	 3	 Guide	 Guide
 4	 4	 Top Menu	 Menu
 5	 5	 Disc Menu	 D. Menu
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 SAT Link	 Smart	 Display	 Shift + Info
 Clear	 Exit	 Return	 Back
 Prog+	 Ch +	 Red	 Red





Original	Replacement
Green	Green
Yellow / Mode	Yellow
Blue / Search	Blue
Blue / Search	TV/R
<< REV	<<
Play	Play
>> FWD	>>
I<< Skip	I<<
Stop	Stop
>>I Skip	>>I
Pause	Pause
VCR	Vol +
DVD	Vol -
Instant Skip	3D
Dubbing	Format
Rec	Rec
Rec Mode	Shift + Rec

Original	Replacement
Setup	Options
Timer Set	Shift + Smart
Timer Prog	Shift + Media
1.3x/0.8x Play	Shift + Play

