Original		Replacement	
	Power		Power
	DVD	APP MEDIA	Media
	VCR	HOME SMART	Smart
	TV	SEARCH TV/R	TV/R
	Vol+	+ VOL	Vol +
	Vol-	VOL –	Vol -
	Mute	MUTE	Mute
GO BACK RETURN	Go Back/Return	RETURN BACK	Back
	>>I	>>I	>>I
	I<<	I<<	I<<
CLEAR	Clear	CLEAR EXIT	Exit
MENU	Menu/i	TOP MENU MENU	Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
OK	OK	OK	Ok

Original		Replacement	
LOCK	Red/·))/Lock	A	Red
TIMER	Green/Timer/[...]	B	Green
INFO	Yellow/Info	C	Yellow
TITLE GUIDE	Blue/Guide	D	Blue
	Violet/Camera	FAV PRE-CH	Pre Ch
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
AV	AV	TIMER AV	AV
PLAY MODE	Play Mode	SHIFT + PLAY MODE	Shift + Play

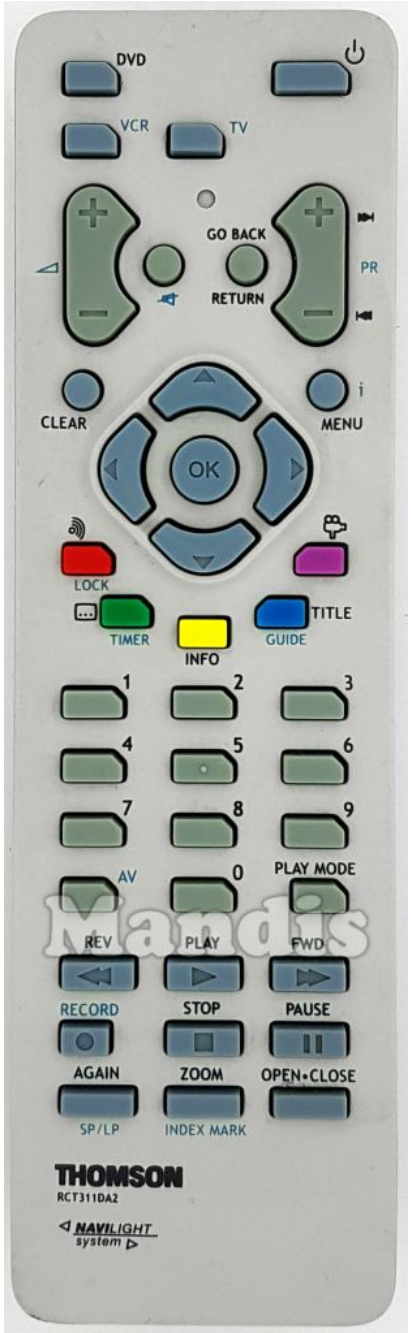

Original		Replacement	
REV	<<		<<
PLAY	Play	PLAY MODE	Play
FWD	>>		>>
RECORD	Record	REC MODE	Rec
STOP	Stop		Stop
PAUSE	Pause		Pause
AGAIN SP/LP	Again/SP/LP	SETTINGS OPT	Options
ZOOM INDEX MARK	Zoom/Index	DISPLAY INFO	Info
OPEN•CLOSE	Open/Close	ZOOM	Eject

Original	Replacement

Original		Replacement	
	Power		Power
DVD	DVD	APP MEDIA	Media
VCR	VCR	HOME SMART	Smart
TV	TV	SEARCH TV/R	TV/R
	Vol+	+ VOL	Vol +
	Vol-	VOL –	Vol -
	Mute	MUTE	Mute
GO BACK RETURN	Go Back/Return	RETURN BACK	Back
PR	PR+	+ CH	Ch +
PR	PR-	CH –	Ch -
CLEAR	Clear	CLEAR EXIT	Exit
MENU	Menu/i	TOP MENU MENU	Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
OK	OK	OK	Ok

Original		Replacement	
LOCK	Red/·))/Lock	A	Red
TIMER	Green/Timer/[...]	B	Green
INFO	Yellow/Info	C	Yellow
TITLE GUIDE	Blue/Guide	D	Blue
	Violet/Camera	FAV PRE-CH	Pre Ch
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
AV	AV	TIMER AV	AV
PLAY MODE	Play Mode	SHIFT + PLAY MODE ▶	Shift + Play

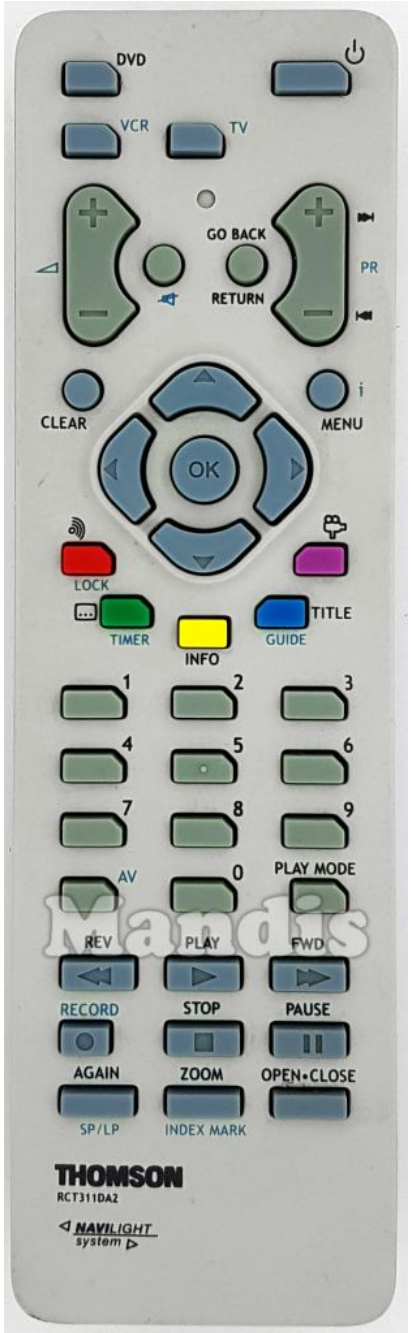

Original		Replacement	
REV	<<		<<
PLAY	Play	PLAY MODE	Play
FWD	>>		>>
RECORD	Record	REC MODE	Rec
STOP	Stop		Stop
PAUSE	Pause		Pause
AGAIN SP/LP	Again/SP/LP	SETTINGS OPT	Options
ZOOM INDEX MARK	Zoom/Index	DISPLAY INFO	Info
OPEN•CLOSE	Open/Close	ZOOM	Eject

Original	Replacement

Original		Replacement	
	Power		Power
	DVD	APP MEDIA	Media
	VCR	HOME SMART	Smart
	TV	SEARCH TV/R	TV/R
	Vol+	+ VOL	Vol +
	Vol-	VOL –	Vol -
	Mute	MUTE	Mute
GO BACK RETURN	Go Back/Return	RETURN BACK	Back
	PR+	+ CH	Ch +
	PR-	CH –	Ch -
CLEAR	Clear	CLEAR EXIT	Exit
MENU	Menu/i	TOP MENU MENU	Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
OK	OK	OK	Ok

Original		Replacement	
LOCK	Red/·))/Lock	A	Red
TIMER	Green/Timer/[...]	B	Green
INFO	Yellow/Info	C	Yellow
TITLE GUIDE	Blue/Guide	D	Blue
	Violet/Camera	FAV PRE-CH	Pre Ch
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
AV	AV	TIMER AV	AV
REV	<<	<<	<<

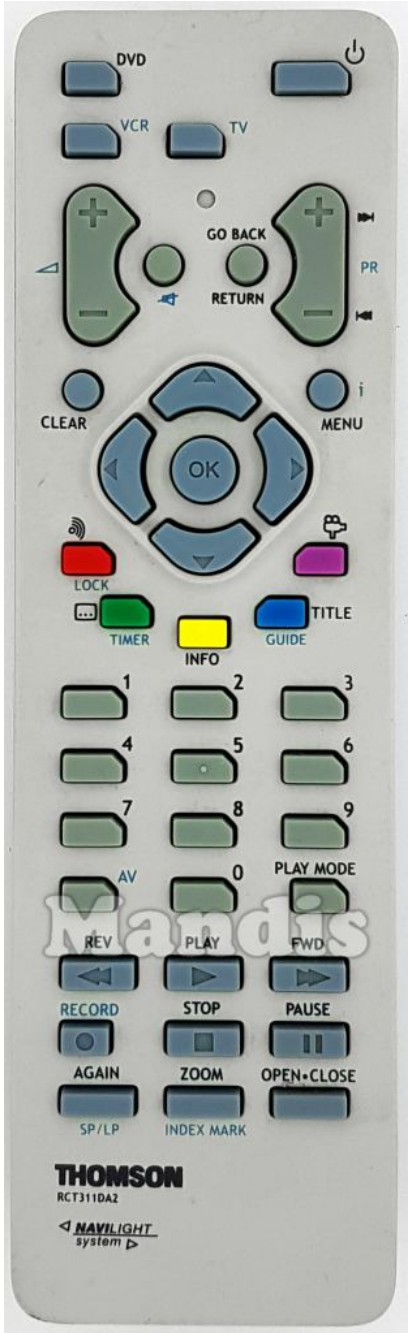

Original		Replacement	
PLAY	Play	PLAY MODE	Play
FWD	>>		>>
RECORD	Record	REC MODE	Rec
STOP	Stop		Stop
PAUSE	Pause		Pause

Original	Replacement